

# CITIZEN®

## INSTRUCTION MANUAL



***Eco-Drive***®

Thank you for purchasing a CITIZEN watch. To ensure correct use, please read these instructions carefully. Please confirm that the CITIZEN International Guarantee Card is included for your possible claim.

---

Vielen Dank für den Kauf dieser CITIZEN Uhr. Bitte lesen Sie diese Anleitung durch, um mit den Funktionen dieser Uhr vertraut zu werden. Überprüfen Sie bitte in Ihrem eigenen Interesse, ob der Uhr die internationale CITIZEN Garantiekarte beigelegt ist.

---

Nous vous remercions d'avoir porté votre choix sur une montre CITIZEN. Pour assurer une utilisation correcte, veuillez lire ces instructions attentivement. Veuillez vous assurer que la carte de garantie internationale CITIZEN est fournie pour toute réclamation éventuelle.

---

Muchas gracias por la compra de este reloj CITIZEN. Para asegurar un uso correcto, lea detenidamente estas instrucciones. Verifique de que la tarjeta de Garantía Internacional de CITIZEN le sea suministrada con el reloj en el momento de la compra, de esta manera, podrá reclamar servicios de acuerdo con los términos de la garantía.

---

Grazie per aver scelto un orologio CITIZEN. Per la sicurezza di un uso corretto, si prega di leggere attentamente le istruzioni. Inoltre abbiate la cortesia di assicurarvi che la carta di garanzia internazionale CITIZEN sia inclusa in caso di un eventuale reclamo.

---

Muito obrigado por adquirir um relógio CITIZEN. Para garantir uma utilização correta, por favor leia estas instruções atentamente. Confirme também se o Cartão Internacional de Garantia da CITIZEN acompanha o relógio. Ele será necessário no caso de uma possível reclamação.

---

承蒙購買CITIZEN錶。為確保正確的使用，敬請仔細閱讀此使用指南。請確認同附的CITIZEN國際保證卡，以享受免費修理之權利。

# CONTENTS

<b>1. Features</b> .....	4
<b>2. Before Using</b> .....	5
<b>3. Names of Components</b> .....	6
<b>4. Setting the Time and Date</b> .....	8
• Setting the Day	
• Setting the Moon Phase	
• Setting the Date and Month	
• Setting the Time	
<b>5. Unique Features of Eco-Drive Watches</b> .....	16
• Insufficient Charge Warning Feature	
• Overcharging Prevention Feature	
• Quick Start Feature	
<b>6. General Reference for Charging Times</b> .....	20

<b>7. Eco-Drive Watch Handling Precautions</b> .....	22
• Charging Precautions	
• Handling of Rechargeable Cell	
• Only Use the Specified Rechargeable Cell	
<b>8. Replacing the Rechargeable Cell</b> .....	24
<b>9. Precautions</b> .....	25
<b>10. Specifications</b> .....	32

# 1. Features

This watch is a solar-powered watch equipped with a solar cell in the watch dial that converts light energy into electrical energy to power the watch. It is also provided with the features described below.

1. A rechargeable cell is used to store electrical energy.
  - This rechargeable cell is a clean energy battery that does not contain mercury or any other harmful substances.
2. This watch is a multi-hand watch that displays the date, day and month using hands of the watch.
3. It also features an additional display of the moon phase.


## 2. Before Using

Before using, please fully charge your watch by exposing the solar cell (watch dial) to light while referring to section 6 entitled "General Reference for Charging Times". Once fully charged, the watch will continue to keep the correct time for about 6 months.

### **<For Optimum Use of this Watch>**

In order to use this watch comfortably, try to keep the watch amply charged at all times. There is no risk of overcharging no matter how often the watch is charged (Overcharging Prevention Feature). It is recommended to charge the watch everyday.


### 3. Names of Components

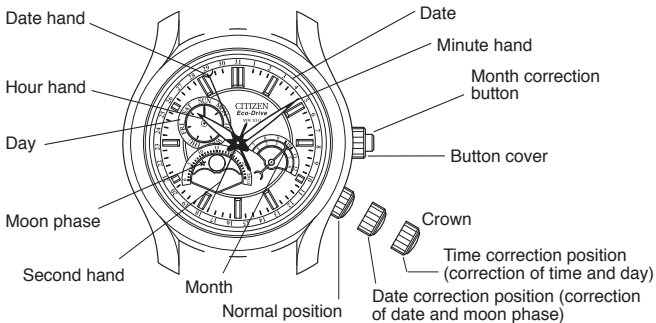


\* The illustrations shown in this manual may differ from the actual watch you have purchased. This manual explains the procedure for using models having the pushbutton at the 3:00 position and the crown at the 4:00 position. If your watch is of a different model, the same procedures can be followed by assuming that the pushbutton and crown are at the positions shown in this manual.

## Month Correction Button:

The month correction button is located at the 3:00 position. There are two types of the month correction buttons. One is a screw lock type and the other is a recessed type. Be sure to refer to the section that applies to your button type. Identification can be made as follows:

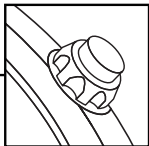

Screw lock type button

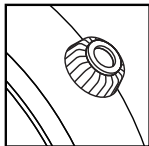

Recessed type button

### **Screw lock type button**

The screw lock type button has a flat smooth end that protrudes slightly from the end of the screw lock. The recessed button type has a dimpled appearance at the end.

In the case the month correction button is of the screw lock type, operate the month correction after first turning the “**button cover**” around the outside of the button to the left to loosen the screw. The button is unable to operate properly if the screw is not adequately loosened. Once you have finished operating the month correction button, turn the “**button cover**” to the right and tighten securely. Please note that if the button cover is not adequately tightened, the button may be bent or it may be accidentally depressed while wearing the watch causing the month to be changed inadvertently.


### **Recessed type button**


The month is changed by simply pressing and releasing the recessed button with a narrow pointed object. There is no screw lock mechanism to release for this type.



## 4. Setting the Time and Date

When setting the time and date simultaneously, the parameters are set in the order of day, moon phase, date and month and finally time.

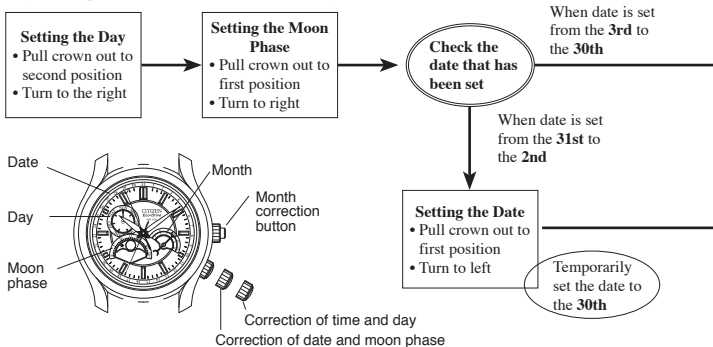


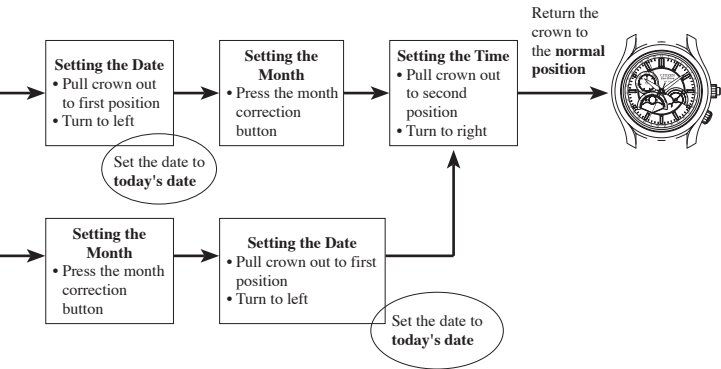

## [Procedure for Setting Time and Date]

### Setting the Day

1. Pull the crown out to the time correction position (second position).
2. Turn the crown to the right (clockwise) and set the day to the current day.
  - The displayed day begins changing at around 12:00 AM and finishes changing at about 5:00 AM.

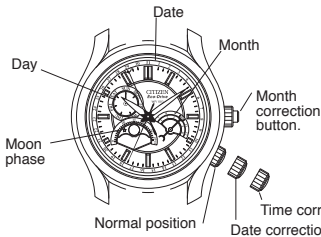









### Setting the Moon Phase

1. Pull the crown out to the date correction position (first position).
2. Turn the crown to the right (clockwise) and set the current moon phase.
  - The moon phase of a particular day can be read from a newspaper and so forth. Set the moon mark while referring to "Reading the Moon Phase" following.

### <Reading the Moon Phase>

The moon phase display does not display the shape of the moon itself, but rather simply indicates the moon phase. It can be used to provide an approximate indication of the moon phase.

New moon Moon age:0 (spring tide)	First quarter Moon age: approx.7 (neap tide)	Full moon Moon age: approx.15 (spring tide)	Last quarter Moon age: approx.22 (neap tide)
			
			

### <For More Accurate Setting of the Moon Phase>

The moon phase can be set more accurately by setting the time during a new moon (when the moon mark cannot be seen: moon phase: 0) or during a full moon (when the moon mark is directly above in the 12:00 direction : moon phase: 15).

## Setting the Date and Month

1. Pull the crown out to the date correction position (first position).
2. Set the date and month.
  - The date hand turns to the right when the crown is turned to the left (counter-clockwise).
  - The month changes when the month correction button is pressed.

### [When the Date is Set from the 3rd to the 30th]

- (1) Turn the crown to the left and set the date hand to **today's date**.
- (2) Press the month correction button and set the month to the **current month**.

### [When the Date is Set to the 31st]

- (1) Temporarily set the date to the **30th**.
- (2) Press the month correction button and set the month to the **current month**.
- (3) Set the date to the **correct date of the 31st**.

### **[When the Date is Set to the 1st or 2nd]**

- (1) Temporarily set the date to the **30th**.
- (2) Press the month correction button to temporarily set **the month to the month one month before the month desired to be set.**

Examples: Set the month to December when setting the month to January

Set the month to February when setting the month to March

- (3) Set the date to the correct date of the **1st or 2nd**.

The month changes to the current month simultaneous to the date changing from the 31st to the 1st.

3. Return the crown to the normal position.

## Setting the Time

1. Pull the crown out to the time correction position (second position) when the second hand reaches the 0 seconds position.
2. Turn the crown to the right (clockwise) and set the time.
  - The day changes immediately after about 5:00 AM. Set the time while paying attention to AM and PM by referring to the time when the day has changed.
3. Return the crown to the normal position in synchronization with a telephone or other time service.

### **[Helpful Hint for Setting the Time Accurately]**

After first stopping the second hand at the 0 seconds position, advance the hour hand and minute hand 4-5 minutes past the correct time and then turn it back in the counter-clockwise direction to the correct time to accurately set the time.

## **[Notes]**

- If the date is corrected when the time on the watch is between 9:00 PM and 12:00 AM, the date may not change on the following day. Avoid correcting the date during this time.
- The calendar operates based on a 31-day month. Correct the date by turning the crown to the left to set to the first day of the following month in months with less than 31 days (months with 30 days and February).
- Avoid correcting the month when the date hand indicates a date from the 31st to the 2nd. If you want to correct the month during this time, wait until the date hand is outside the range of the 31st to the 2nd. Then reset the date hand to the correct date.
- When turning the crown to the left (counter-clockwise) when correcting the time or day, the changing of the date may change a day late during normal use.



## 5. Unique Features of Eco-Drive Watches

When the watch becomes insufficiently charged, the watch display changes as shown below.

[Normal Time Display]



If insufficiently charged




When charged

The time is incorrect since the watch has stopped as a result of being insufficiently charged. Reset the watch to the correct time.

**[Insufficient Charge  
Warning Display]**



If the capacity of the rechargeable cell becomes low without charging

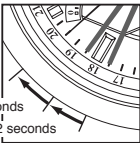

The second hand changes to  
2-second interval movement

**[Watch Stopped]**



Sufficiently charge the watch by exposing to light until the second hand returns to 1-second interval movement.


## <Insufficient Charge Warning Feature>

**When the watch becomes insufficiently charged, the second hand begins 2-second interval movement to indicate that the watch is insufficiently charged.**

- Although the watch continues to run normally at this time, the watch will stop after about 4 days have passed since the watch has become insufficiently charged.

Charge the watch by exposing to light to return to the original 1-second interval movement. Sufficiently charge the watch even after it has returned to 1-second interval movement to ensure that it can be used comfortably. There is no risk of overcharging since the watch is provided with an overcharging prevention feature.

- Although the watch will begin to run again when exposed to light after it has stopped due to being insufficiently charged, since the time is incorrect, reset the time after sufficiently charging the watch.

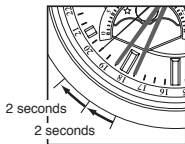

## **<Overcharging Prevention Feature>**

When the rechargeable cell becomes fully charged as a result of exposing the watch dial (solar cell) to light, the overcharging prevention feature is activated automatically to prevent the battery from being charged further. Consequently, there is no degradation in the performance of the solar cell or rechargeable cell no matter how often the watch is charged. This lets you expose the watch to light without worrying about overcharging.

## **<Quick Start Feature>**

The watch will stop running if it is not charged at all. The watch hands will begin to move after about 10 seconds when the watch is exposed to light. (The time until the hands begin to move varies depending on the model of the watch and the intensity of the light.) However, please note that the watch may stop again since it will not be adequately charged if the light is blocked at this time.

## 6. General Reference for Charging Times

Below are the approximate charging times when exposing to light continuously. Please use this table as a reference only.

Environment	Illuminance (lx)	Charging time (approx.)		
		To work for one day	To start working normally when the cell is discharged	To become fully charged when the cell is discharged
Outdoors (sunny)	100 000	3 minutes	16 minutes	12 hours
Outdoors (cloudy)	10 000	11 minutes	2 hours	35 hours
20 cm (8 inches) away from a fluorescent lamp (30 W)	3 000	40 minutes	6 hours	120 hours
Interior lighting	500	4 hours	40 hours	–

- **Exposing to direct sunlight is recommended to charge your watch.**

A fluorescent lamp or interior lighting does not have sufficient illumination to charge the rechargeable cell efficiently.

**[Note]**

- Once fully charged, the watch will continue to run for about 6 months with any additional charging. As shown in the table above, a considerable amount of time is required until the watch starts running once the watch has stopped as a result of being insufficiently charged. Try to keep your watch sufficiently charged at all times by charging everyday.

Furthermore, it is recommended to charge your watch by exposing to direct sunlight once a month.

## 7. Eco-Drive Watch Handling Precautions

### [Try to keep the watch charged at all times]

Please note that if you frequently wear long sleeves, the watch can easily become insufficiently charged because of being hidden and not exposed to light. When you take the watch off, try to place in as bright a location as possible so that it will always be charged and continue to run properly at all times.

### Charging Precautions

- Avoid charging the watch at high temperatures (about 60°C / 140°F or higher) since allowing the watch to reach a high temperature during charging can cause a malfunction.

### Examples:

- Charging by placing the watch too close to a light source that may become hot such as an incandescent lamp or halogen lamp.
- Charging by placing the watch on an automobile dashboard that can easily reach a high temperature.

- When charging the watch with an incandescent lamp, halogen lamp or other light source that may reach a high temperature, always make sure to place the watch at least 50 cm (20 in) away from the light source to prevent the watch from reaching a high temperature.

### **Handling of Rechargeable Cell**

- Never attempt to remove the rechargeable cell from the watch.
- If the rechargeable cell must unavoidably be removed, store it out of the reach of small children to prevent accidental swallowing.
- If the rechargeable cell should happen to be swallowed, consult a physician immediately and seek medical attention.



### **Only Use the Specified Rechargeable Cell**

- Never use a rechargeable cell other than the genuine rechargeable cell used in this watch. Even if another type of rechargeable cell is installed in the watch, the watch structure does not permit its operation. In cases in which a different rechargeable cell such as a silver battery is forcibly installed in the watch and charged, overcharging may occur that will eventually cause the rechargeable cell to rupture. This can result in the risk of the watch being damaged or injury to the wearer.
- When the rechargeable cell is replaced, always make sure to use the specified rechargeable cell.

## **8. Replacing the Rechargeable Cell**

Unlike ordinary silver batteries, the rechargeable cell used in this watch does not have to be periodically replaced due to repeated charging and discharging.

## 9. Precautions

### **WARNING: Water-resistance performance**

- Water-resistance for daily use (to 3 atmospheres): This type of watch is water-resistant to minor exposure to water. For example, you may wear the watch while washing your face; however, it is not designed for use underwater.
- Upgraded water-resistance for daily use (to 5 atmospheres): This type of watch is water-resistant to moderate exposure to water. You may wear the watch while swimming; however, it is not designed for use while skin diving.
- Upgraded water-resistance for daily use (to 10/20 atmospheres): This type of watch may be used for skin diving; however, it is not designed for scuba or saturated diving using helium gas.

## **WARNING: Water-resistance performance**

There are several types of water-resistant watches, as shown in the following table.

The unit "bar" is roughly equal to 1 atmosphere.

\* WATER RESIST(ANT) xx bar may also be indicated as W.R. xx bar.



Minor exposure to water  
(washing face, rain, etc.)





Indication		Specifications
Dial	Case (case back)	
WATER RESIST or no indication	WATER RESIST(ANT)	Water-resistant to 3 atmospheres
WR 50 or WATER RESIST 50	WATER RESIST(ANT) 5 bar or WATER RESIST(ANT)	Water-resistant to 5 atmospheres
WR 100/200 or WATER RESIST 100/200	WATER RESIST(ANT) 10bar/20 bar or WATER RESIST(ANT)	Water-resistant to 10/20 atmospheres

**OK**

**OK**

**OK**

For correct use within the design limits of the watch, confirm the level of water-resistance of your watch, as indicated on the dial and case, and consult the table.

Examples of use				
				
Moderate exposure to water (washing, kitchen work, swimming, etc.)	Marine sports (skin diving)	Scuba diving (with air tank)	Operation of the crown or button with moisture visible	
<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	
<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	
<b>OK</b>	<b>OK</b>	<b>NO</b>	<b>NO</b>	

## **CAUTION**

- Be sure to use the watch with the crown pressed in (normal position). If your watch has a screw-lock type crown, be sure to tighten the crown completely.
- Do NOT operate the crown or button with wet fingers or when the watch is wet. Water may enter the watch and compromise water-resistance.
- If the watch is used in seawater, rinse with fresh water afterward and wipe with a dry cloth.
- If moisture has entered the watch, or if the inside of the crystal is fogged up and does not become clear within a day, immediately take the watch to your dealer or Citizen Service Center for repair. Leaving the watch in such a state will allow corrosion to form inside.
- If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair. Otherwise, pressure inside the watch will increase, and parts (crystal, crown, buttons, etc.) may come off.

## **CAUTION: Keep your watch clean.**

- Leaving dust and dirt deposited between the case and crown may result in difficulty in pulling the crown out. Rotate the crown while in its normal position, from time to time, to loosen dust and dirt and then brush it off.
- Dust and dirt tend to be deposited in gaps in the back of the case or band. Deposited dust and dirt may cause corrosion and soil your clothing. Clean the watch occasionally.

## **Cleaning the Watch**

- Use a soft cloth to wipe off dirt, perspiration and water from the case and crystal .
- Use a soft, dry cloth to wipe off perspiration and dirt from the leather band.
- To clean a metal, plastic, or rubber watchband, wash away dirt with mild soap and water. Use a soft brush to remove dust and dirt jammed in the gaps in the metal band. If your watch is not water-resistant, take it to your dealer.

**NOTE:** Avoid using solvents (thinner, benzine, etc.), as they may mar the finish.

## **CAUTION: Operating environment**

- Use the watch within the operating-temperature range specified in the instruction manual. Using the watch where temperatures are outside the specified range, may result in deterioration of functions or even stoppage of the watch.
- Do NOT use the watch in places where it is exposed to high temperature, such as in a sauna.  
Doing so may result in a skin burn.
- Do NOT leave the watch in a place where it is exposed to high temperature, such as the glove compartment or dash-board of a car.  
Doing so may result in deterioration of the watch, such as deformation of plastic parts.
- Do NOT place the watch close to a magnet.  
Timekeeping will become inaccurate if you place the watch close to magnetic health equipment such as a magnetic necklace or a magnetic latch of a refrigerator door or handbag clasp or the earphone of a mobile phone. If this has occurred, move the watch away from the magnet and reset the time.

- Do NOT place the watch close to household appliances that generate static electricity. Timekeeping may become inaccurate if the watch is exposed to strong static electricity, such as is emitted from a TV screen.
- Do NOT subject the watch to a strong shock such as dropping it onto a hard floor.
- Avoid using the watch in an environment where it may be exposed to chemicals or corrosive gases.

If solvents, such as thinner and benzene, or substances containing such solvents come in contact with the watch, discoloration, melting, cracking, etc. may result. If the watch comes in contact with mercury used in thermometers, the case, band or other parts may become discolored.

### **Periodical inspections**

Your watch needs inspection once in every two or three years for safety and long use.

To keep your watch water-resistant, the packing needs to be replaced regularly.

Other parts need to be inspected and replaced if necessary.

Ask for Citizen genuine parts upon replacement.



## 10. Specifications

- **Model:** 865\*
- **Type:** Analog solar-powered watch
- **Timekeeping accuracy:** Within  $\pm 15$  seconds per month on average (when worn at normal temperatures of  $+5^{\circ}\text{C}$  to  $+35^{\circ}\text{C}$  /  $41^{\circ}\text{F}$  to  $95^{\circ}\text{F}$ )
- **Operating temperature range:**  $-10^{\circ}\text{C}$  to  $+60^{\circ}\text{C}$  /  $14^{\circ}\text{F}$  to  $140^{\circ}\text{F}$
- **Display functions:**
  - Time: Hours, minutes, seconds
  - Calendar: Hand display of date, day and month
  - Display of moon phase
- **Additional functions:**
  - Insufficient charge warning feature
  - Overcharging prevention feature
  - Quick start feature

- **Continuous Operating Times**

Time until watch stops without charging after being fully charged: Approx. 6 months

Time from insufficient charge warning display (2-second interval movement) until watch stops due to insufficient charging: Approx. 4 days

- **Battery:** Rechargeable cell, 1

\* Specifications are subject to change without notice.

CE

Model No.AP1 \*

Cal.865 \*

CTZ-B8096⑤